

BMW K1200S

Modular Seat System

Instructions:

Note: Instructions apply to both the **Storage POD** and rear seat cushion accessories.

*See Installation Instructions for Backrest option with purchase of Backrest.


IMPORTANT: Perform assembly on a soft surface to prevent damage.

Tools needed:
Phillips screw driver.

1

Choose your accessory:

Insert tabs **(A)** of your accessory into slots **(B)** of the seat pan in a down and forward motion.

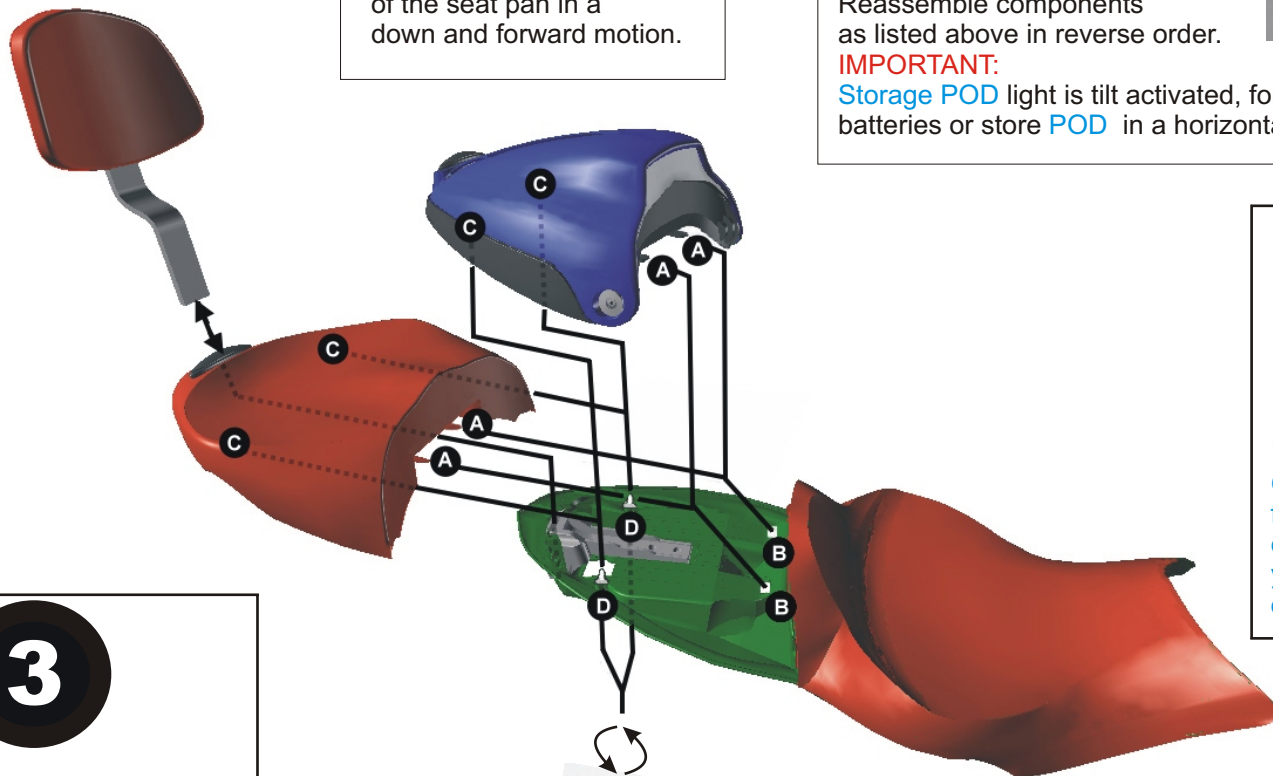


3

Use a phillips screw driver to engage (2) locking stud **(D)** on the bottom of the seat pan, onto the accessory receivers **(C)** by turning the studs **ONLY** 1/4 turn. To insure you have properly secured your accessory, pull up at the rear of the accessory. It should remain firmly attached to the pan.

POD light and batteries:

Two CR2430-3V batteries included. To activate **POD** light, remove clear plastic tab between batteries. To replace batteries, remove two phillips screws **(1)**, remove cover and circuit board **(2)** then remove and replace batteries **(3)**. Reassemble components as listed above in reverse order.

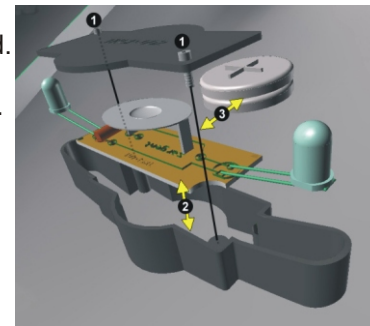

IMPORTANT:


Storage POD light is tilt activated, for long term storage, remove batteries or store **POD** in a horizontal position.

2

Lower rear of accessory into place.

Gently tuck back edge of the front seat under the leading edge of the **Storage POD** as you install the **POD** for ease of installation.

Storage POD Latch and Lock

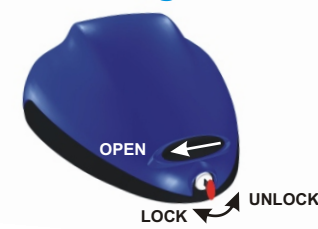

While standing at the rear of your motorcycle, slide the World Sport logo latch to the left to open your **Storage POD**. Locking the **Storage POD** will prevent the latch from opening the **POD**.