

**BMW R 1100 / 1150 RS  
SARGENT WORLD SPORT PERFORMANCE SEAT  
INSTALLATION GUIDE**

**Installation, Front Seat**

Using a 5mm allen wrench, remove the wire bracket from your OEM seat.

Install the OEM wire bracket on your new Sargent Seat using the OEM hardware.


Slide the front seat in place, catching the wire bracket in the proper receivers for the desired low, mid, or high position.

Check to be sure that the seat is secured in the front by lifting up on the seat.



**Note**

*The threaded bumpers on the back of the front seat are pre-set at our factory, adjustment should not be necessary. These bumpers provide forward pressure to the front seat after the rear seat is locked into place. Fine tuning of front seat forward pressure at various height positions can be achieved by adjusting these bumpers slightly in or out.*

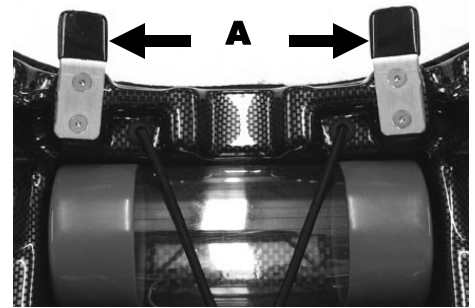

**Installation, Rear Seat**

While standing behind the bike, slide the front seat in place by guiding the tabs "A" under the receiver bracket "B" on the bike. See photos 1 thru 3.

Check to be sure that the front of the rear seat is hooked under the bracket by pulling up on the front of the rear seat.

Push down of the back of the seat with firm pressure to lock the seat. See photo 4.

